

GIORGIO FEDON
1919

WARRANTY BOOKLET
INSTRUCTION MANUAL

HOW TO SET A THREE-HANDED WATCH WITH DATE FUNTION (VJ52)

DATE SETTING

- 1) Pull out the crown to position 2.
- 2) Turn the crown counterclockwise until the previous date appears.

 
Note:

Do not set the date between 9:00P.M. to 3:00 A.M. Otherwise the date may not change properly. If it is necessary to set the date during that time period, first change the time to any time outside this period, then set the date.

- 3) Pull out the crown to position 3. Advance the hour and minute hands until the desired date appears. The time is now set for the A.M. period.
- 4) Push the crown back in to position 1.

TIME SETTING

- 1) Pull out the crown to position 3.
- 2) Turn the crown to set the time.
- 3) Push the crown back in to position 1.

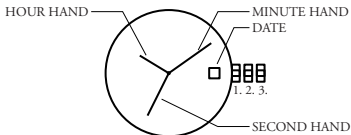

HOW TO SET A THREE-HAND WATCH WITH CHRONOGRAPH (VD53, VD54, VD57, VD67)

TIME SETTING (VD54)

- 1) Pull out the crown so as to stop the second hand at the 12 o'clock position.
- 2) Turn the crown to set the time.
- 3) Push the crown back in to position 1.

TIME/ DATE SETTING (VD53, VD57, VD67)

- 1) Pull out the crown to position 2.
- 2) Turn the crown until the previous day's date appears.

Note:

Do not set the date between 9:00P.M. to 3:00 A.M. Otherwise the date may not change properly. If it is necessary to set the date during that time period, first change the time to any time outside this period, then set the date.

- 3) Pull out the crown to position 3. Advance the hour and minute hands until the desired date appears. Then set the hands to desired time by turning the crown.

Note:

While setting the time, be sure to check that the correct A.M. or P.M. period is set.

- 4) Push the crown back in to position 1.

 
 
HOW TO USE STOPWATCH

 
 
- 1) Press button A to start/ stop the stop watch.
- 2) Press button B to control the split time and reset.

STOPWATCH HAND POSITION ADJUSTMENT

- 1) Pull out the crown to position 3.
- 2) Press and hold buttons A and B at the same time for 2 seconds and then release them. The stopwatch hand moves back and returns to where it was.

- 3) Press button A or B to reset the stopwatch hands to the “0” position.
 VD53/ VD54:
 Press button A to move the hands counterclockwise.
 Press button B to move the hands clockwise.
 VD57:
 Press button A to set the stopwatch 1/10 second hand.
 Press button B to set the stopwatch second and minute hands.
 VD67:
 Press button A to set the stopwatch 1/5 second hand.
 Press button B to set the stopwatch minute and hour hands.
 The hands move quickly if the respective buttons are held down.
- 4) Turn the crown to set the hour and minute hands to the desired time, and push the crown back in to position 1.

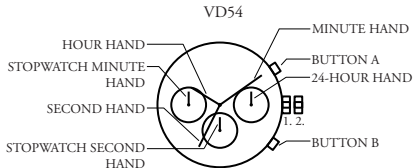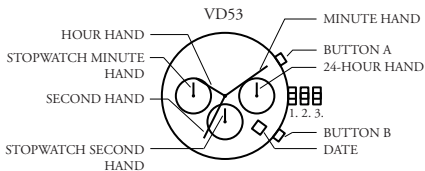

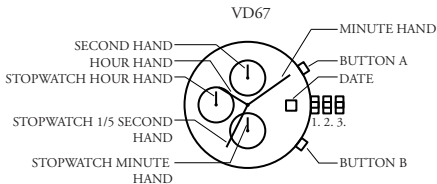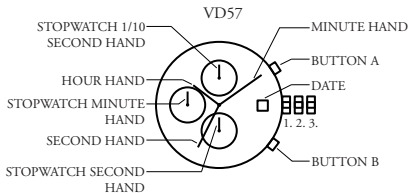

HOW TO SET A THREE-HAND WATCH WITH CHRONOGRAPH (ISA 8172/220)

TIME/ DAY SETTING

- 1) Pull out the crown to position 3.
- 2) Turn the crown advance hour and minute hands. The hand showing the days of the week will also move with the hour and minute hands. Advance the hour and minute hands until the desired days of the week appear. Then set the hands to desired time by turning the crown.

Note:

While setting the time, be sure to check that the correct A.M. or P.M. period is set.

- 3) Push the crown back in to position 1.

DATE SETTING

- 1) Pull out the crown to position 2.
- 2) Turn the crown until the previous day's date appears.

Note:

Do not set the date between 9:00P.M. to 3:00 A.M. Otherwise the date may not change properly. If it is necessary to set the date during that time period, first change the time to any time outside this period, then set the date.

- 3) Pull out the crown to position 3. Advance the hour and minute hands until the desired date appears. Then set the hands to desired time by turning the crown.

Note:

While setting the time, be sure to check that the correct A.M. or P.M. period is set.

 
- 4) Push the crown back in to position 1.

HOW TO USE STOPWATCH

- 1) Press button A to start/ stop the stop watch.
- 2) Press button B to control the split time, restart and reset.

STOPWATCH HAND POSITION ADJUSTMENT

- 1) Pull out the crown to position 2.
- 2) Press button B to set the stopwatch minute hand.
- 3) Press button A to set the stopwatch 1/5 second hand.
- 4) Push the crown back in to position 1.

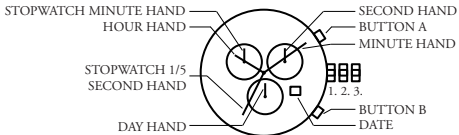

HOW TO SET A THREE-HAND WATCH WITH CHRONOGRAPH (RONDA 5030.D)

TIME/ DATE SETTING

- 1) Pull out the crown to position 2.
- 2) Turn the crown until the previous day's date appears.

Note:

Do not set the date between 9:00P.M. to 3:00 A.M. Otherwise the date may not change properly. If it is necessary to set the date during that time period, first change the time to any time outside this period, then set the date.

- 3) Pull out the crown to position 3. Advance the hour and minute hands until the desired date appears. Then set the hands to desired time by turning the crown.

Note:

While setting the time, be sure to check that the correct A.M. or P.M. period is set.

- 4) Push the crown back in to position 1.

HOW TO USE STOPWATCH

 
- 1) Press button A to start/ stop the stop watch.
- 2) Press button B to control the split time, restart and reset.

STOPWATCH HAND POSITION ADJUSTMENT

- 1) Pull out the crown to position 3.
- 2) Press and hold buttons A and B at the same time for 2 seconds and then release them. The stopwatch hand moves back and returns to where it was.
- 3) Press button A to set the stopwatch second hand.
- 4) Press button B to set the next hand.
- 5) Press button A to set the stopwatch hour hand.
- 6) Press button B to set the next hand.
- 7) Press button A to set the stopwatch minute hand.
- 8) Push the crown back in to position 1.

Note:

The hands move quickly if the respective buttons are held down.

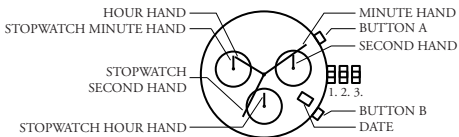

HOW TO SET A THREE-HANDED WATCH WITH DAY AND DATE HANDS (VD75)

TIME/ DAY SETTING

- 1) Pull out the crown to position 3.
- 2) Turn the crown advance hour and minute hands. The hand showing the days of the week will also move with the hour and minute hands. Advance the hour and minute hands until the desired days of the week appear. Then set the hands to desired time by turning the crown.

Note:

While setting the time, be sure to check that the correct A.M. or P.M. period is set.

- 3) Push the crown back in to position 1.

 
DATE SETTING

- 1) Pull out the crown to position 2.
- 2) Turn the crown counterclockwise to advance the date hand.

Note:

Do not set the date between 9:00P.M. to 3:00 A.M. Otherwise the date may not change properly. If it is necessary to set the date during that time period, first change the time to any time outside this period, then set the date.

- 3) Push the crown back in to position 1.

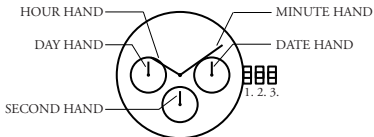


HOW TO SET A TWO-HANDED WATCH WITH 24-HOUR AND SECOND HANDS (VD77)

TIME SETTING

- 1) Pull out the crown to position 2.
- 2) Turn the crown to set the time.
- 3) Push the crown back in to position 1.

24-HOUR HAND SETTING

 
The 24-hour hand moves correspondingly with the hour and minute hands. When setting the time be sure to check that the 24-hour hand is set properly.

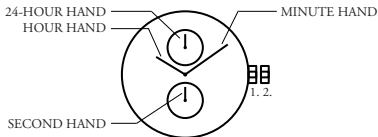

HOW TO SET A TWO-HANDED WATCH WITH SECOND HANDS (VD78)

TIME SETTING

 - 1) Pull out the crown to position 2.
- 2) Turn the crown to set the time.
- 3) Push the crown back in to position 1.

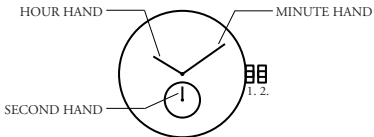

HOW TO SET A TWO-HANDED WATCH WITH DAY AND DATE HANDS (VD79)

TIME/ DAY SETTING

- 1) Pull out the crown to position 3.
- 2) Turn the crown advance hour and minute hands. The hand showing the days of the week will also move with the hour and minute hands. Advance the hour and minute hands until the desired days of the week appear. Then set the hands to desired time by turning the crown.

Note:

While setting the time, be sure to check that the correct A.M. or P.M. period is set.

- 3) Push the crown back in to position 1.

 
DATE SETTING

- 1) Pull out the crown to position 2.
- 2) Turn the crown counterclockwise to advance the date hand.

Note:

Do not set the date between 9:00P.M. to 3:00 A.M. Otherwise the date may not change properly. If it is necessary to set the date during that time period, first change the time to any time outside this period, then set the date.

- 3) Push the crown back in to position 1.

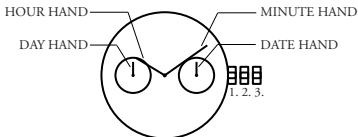

HOW TO SET AN AUTOMATIC MECHANICAL WATCH (Y675/ Y676/ NH38)

AUTOMATIC MECHANICAL WATCH SETTING

- 1) If the watch is worn on the wrist, the mainspring will be wound automatically through normal wrist movement.
- 2) To start the watch after it stops completely, wind it up by swinging it from side to side until the second hand starts moving. Then, set the time, day and date before wearing the watch on the wrist.
- 3) Once the watch is wound up fully, it operates more than 40 hours. If the watch is used without being wound up fully, gain or loss of the watch may result. To avoid this, wear the watch for more than 8 hours a day.

DATE SETTING - Some models do not display the date (Y675)

- 1) Pull out the crown to position 2.
- 2) Turn the crown clockwise until the previous date appears.

Note:

Do not set the date between 9:00P.M. to 4:00 A.M. Otherwise, the date may not change properly. If it is necessary to set the date during that time period, first change the time to any time outside this period, then set the date.

- 3) Pull out the crown to position 3. Advance the hour and minute hands until the desired date appears. The time is now set for the A.M. period.
- 4) Push the crown back in position 1.

DATE/ DAY SETTING (Y676)

- 1) Pull out the crown to position 2.
- 2) Turn the crown counterclockwise until the previous day appears, and turn the crown clockwise until the previous date appears.

Note:

Do not set the date and day between 9:00P.M. to 4:00 A.M. Otherwise, the date and day may not change properly. If it is necessary to set the date and day during that time period, first change the time

to any time outside this period, then set the date and day.

- 3) Pull out the crown to position 3. Advance the hour and minute hands until the desired date appears. The time is now set for the A.M. period.
- 4) Push the crown back in position 1.

TIME SETTING (Y675/Y676)

- 1) Pull out the crown to position 3.

Note:

The second hand is still moving.

- 2) Turn the crown to set the time.

Note:

While setting the time, be sure to check that the correct A.M. or P.M. period is set.

- 3) Push the crown back in to position 1.

TIME SETTING (NH38)

 
- 1) Pull out the crown to position 2.

 
 
Note:

The second hand is still moving.

- 2) Turn the crown to set the time.

- 3) Push the crown back in to position 1.

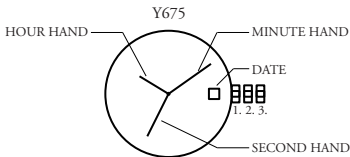

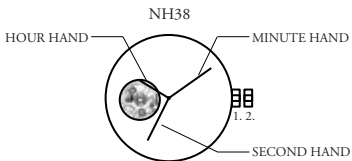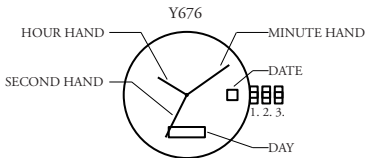

TO PRESERVE THE QUALITY OF YOUR WATCH

PRECAUTIONS ON WEARING YOUR WATCH

WARNING

- 1) In case you tumble, fall or bump into others with the watch worn on your wrist, you may be injured by the reason of the fact that you wear the watch.
- 2) When you come into contact with children, especially with infants, they may get injured or develop a rash caused by an allergic reaction.
- 3) Your watch may damage property or malfunction depending on your actions when wearing it. Special care should be taken.

CAUTION

- 1) When clasping and unclasping the band, you may damage your nail, depending on the type of clasp used with the band.

CARING FOR YOUR WATCH

CAUTION

- 1) The case and bracelet touch the skin directly just as underwear. If they are left dirty, the edge of a sleeve may be stained with rust or those who have a delicate skin may have a rash.
- 2) After removing the watch from your wrist, wipe perspiration or moisture with a soft cloth. This will prevent the watch from being soiled, this allowing for prolongation of the life of the gasket.
- 3) Your watch is extremely sensitive to chemicals, including benzene, thinner, alcohol, detergent and other organic solvents. Keep your watch away from chemicals and avoid their chemical reaction to your watch. If not, it may be deteriorated.

<Leather band>

When removing moisture from a leather band, do not rub the band with the cloth as this may discolor it or reduce its gloss. Be sure to blot up the moisture using a soft dry cloth.

<Metal band>

Clean the watch band with a soft toothbrush dipped in water or soapy water, and be sure to blot up the moisture using a soft dry cloth. If your watch is not water-resistant, be careful not to get the case wet when cleaning.

<Soft plastic band>

If your watch has a soft plastic band such as urethane band, do not leave the watch under a fluorescent lamp or direct sunlight for a long time, or do not leave the band soiled. Otherwise, the band may be discolored, hardened or broken. Also, do not keep the watch in a place where it is exposed to high humidity, or do not leave the band wet with perspiration or water. Otherwise, the band may be discolored in a very short time. When the band is soiled, rinse it in soapy water. Do not use solvents for cleaning as some solvents may deteriorate the band. If your watch has a semitransparent urethane band, which is easily discolored, special care should be taken to keep it clean. Depending on the condition of use, the semitransparent band may be discolored after several months of use.

RASHES AND ALLERGIES

CAUTION

- 1) Adjust the bracelet or band so that there will be a little clearance between the bracelet or band and your wrist to avoid accumulation of perspiration.
- 2) If you are constitutionally predisposed to rash, the band may cause you to develop a rash or disorder depending on your physical condition.

- 3) The possible causes of the rash are as follows:
 - a. Allergy to metals or leathers
 - b. Rust, dust or perspiration on the watch or band
- 4) If you develop any skin reactions, take off the watch and consult a doctor immediately.

WATER RESISTANCE

Check the dial or the back of your watch case for the water resistant quality, and then see the table below.

SUITABLE ATMOSPHERE	WATER RESISTANT			
	3ATM	5ATM	10ATM	100ATM
Designed to withstand water usually experienced in daily living such as splashes and rain	O	O	O	O
Designed to withstand swimming and kitchen work	X	O	O	O
Skin diving without scuba	X	X	O	O
Genuine diving using scuba or helium gas	X	X	X	O
Button operation when the watch is wet	X	O	O	O
Crown operation when the watch is wet	X	X	X	X

WARNING

- 1) NEVER WEAR a 10, 15, or 20 ATM water-resistant watch during saturated diving and air diving.
- 2) NEVER WEAR a 5 ATM water-resistant watch during any type of diving including skin diving.
- 3) NEVER PUT a 3 ATM water-resistant watch into water.

- 4) NEVER WEAR your watch into a hot tub or sauna. Extreme heat and pressure may cause your watch to lose its water resistance.

⚠ CAUTION

- 1) After you use a 5, 10, 15, or 20 ATM water-resistant watch in a bathing place, remove salt, etc. as soon as possible. If not, the watch may be rusted. If you rinse the watch under running water, excessive water pressure applies to the watch, this causing a failure in its water resistance. Always rinse the watch in a pot or bowl and be careful not to apply excessive water pressure to the watch.
- 2) If a leather band gets wet, its durability may be affected.
- 3) Water resistance is not permanent. In the course of time, as your case becomes worn, the water resistance of the watch may decrease.

PLACE TO KEEP YOUR WATCH

When not in use, the watch may be damaged, deteriorated or broken in any of the following cases:

- 1) If the watch is exposed to a temperature below -5°C or above $+50^{\circ}\text{C}$ for a long time, its performance may be impaired or it may stop operating.
- 2) If the watch is exposed to direct sunlight, high temperature or low temperature for a long time, it may gain or lose time.
- 3) If the watch is exposed to magnetic leakage from TV sets, speakers, mobile phones, magnetic necklaces, etc., it may gain or lose time.
- 4) If the watch is exposed to strong vibration, it may be broken or gain or lose time.
- 5) If the watch is exposed to chemicals or chemical steam, it may deteriorated or break. Examples of chemicals: Benzene, thinner, nail polish, cosmetics sprays, cleaners, toilet solvents, adhesive agents, mercury, iodized disinfectants, insect repellents, etc.
- 6) If the watch is exposed to hot spring water or other special environment or put in a box containing insect-killer, it may be deteriorated.
- 7) It is recommended that the watch be put in a clean box or case and stored in a well-ventilated place.

REMARKS ON THE BATTERY

BATTERY LIFE

When a new battery is installed, this watch operates for approximately two years. However, if the functions such as a stopwatch are used, the battery life may be less than the specified period.

MONITOR BATTERY

The battery in your watch may run down in less than the specified period after the date of purchase, as it is a monitor battery inserted at the factory to check the functions and performance of the watch.

BATTERY REPLACEMENT

- 1) For battery replacement, be sure to have the battery replaced with a genuine battery at the retailer or the dealer from whom you purchased the watch.
- 2) If the old battery is left in the watch for a long time, a malfunction may be caused due to battery leakage, etc. Have it replaced with a new one as soon as possible.
- 3) Battery replacement is subject to billing even if it runs down within the guarantee period.

WARNING

- 1) The battery is not rechargeable. Never attempt to recharge it, as this may cause battery leakage or damage to the battery.
- 2) Do not remove the battery from the watch.
- 3) If it is necessary to take out the battery, keep it out of the reach of children.
- 4) If the child swallows it, consult a doctor immediately as it will affect the health of the child.

CAUTION

Do not leave your watch out of the room temperature below 5°C or above 35°C for a long time. Doing so may shorten the battery life or cause a malfunction due to battery leakage.