


6S10 6S20 6S30 6S11 6S21

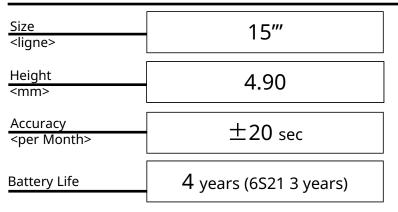

Pusher **9** Attached Ф34.6 **SR927W**

Chronograph Second

Small

1/20 Sec

Chronograph

Chronograph


Minute

7



Battery consumption could be minimum by pulling out the stem





Original Package

200 pcs

Time measurement

Accuracy

The unit (gate) time of measurement must be set at "10 sec." and the measurement must be performed in the form of complete watch.

10 sec


10 sec

10 sec



9:00pm - 1:00am

6S10 **6S20** 6S30 6S11 6S21

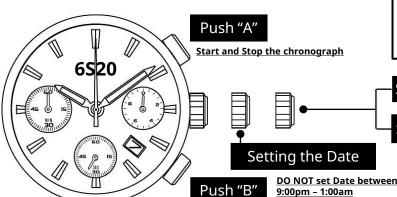


Setting the Time


Set CHRONOGRAPH hands to reset

Push A or B to set the hands to the zero position. The chronograph hands can be advanced rapidly by continuously pressing button.

A for the Center Chronograph Second hand, B for 1/20 hands

Reset the chronograph

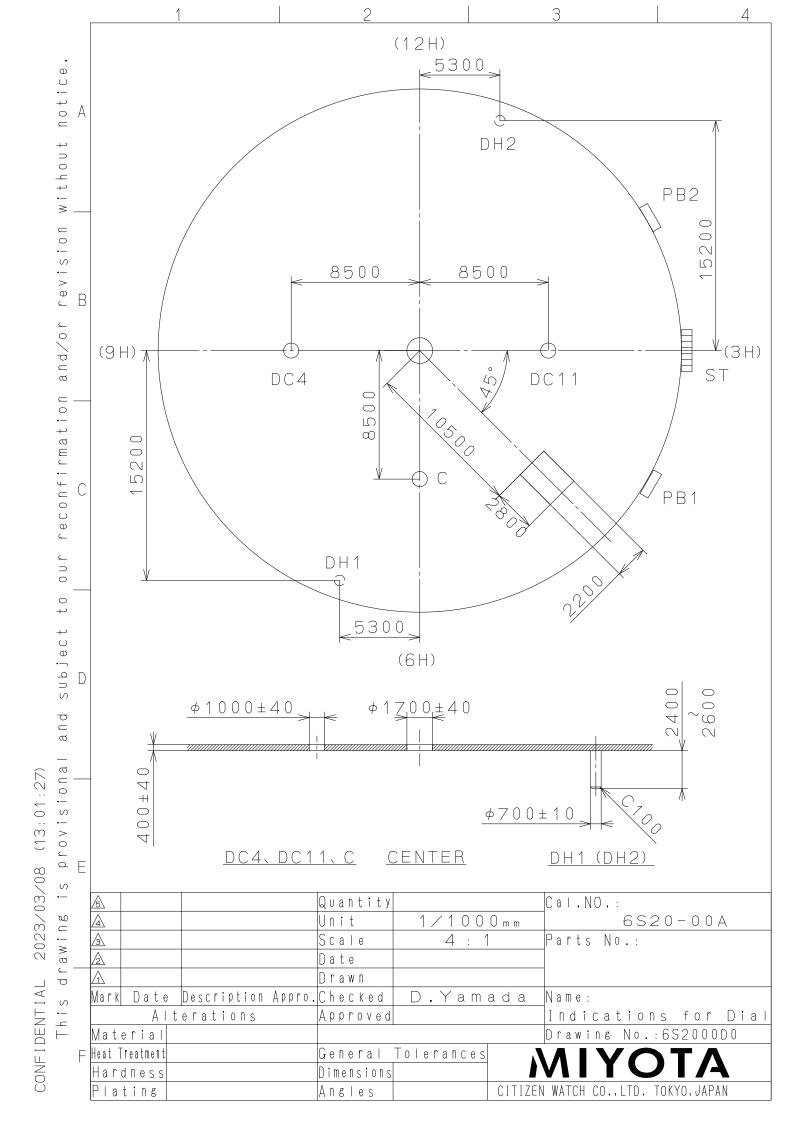

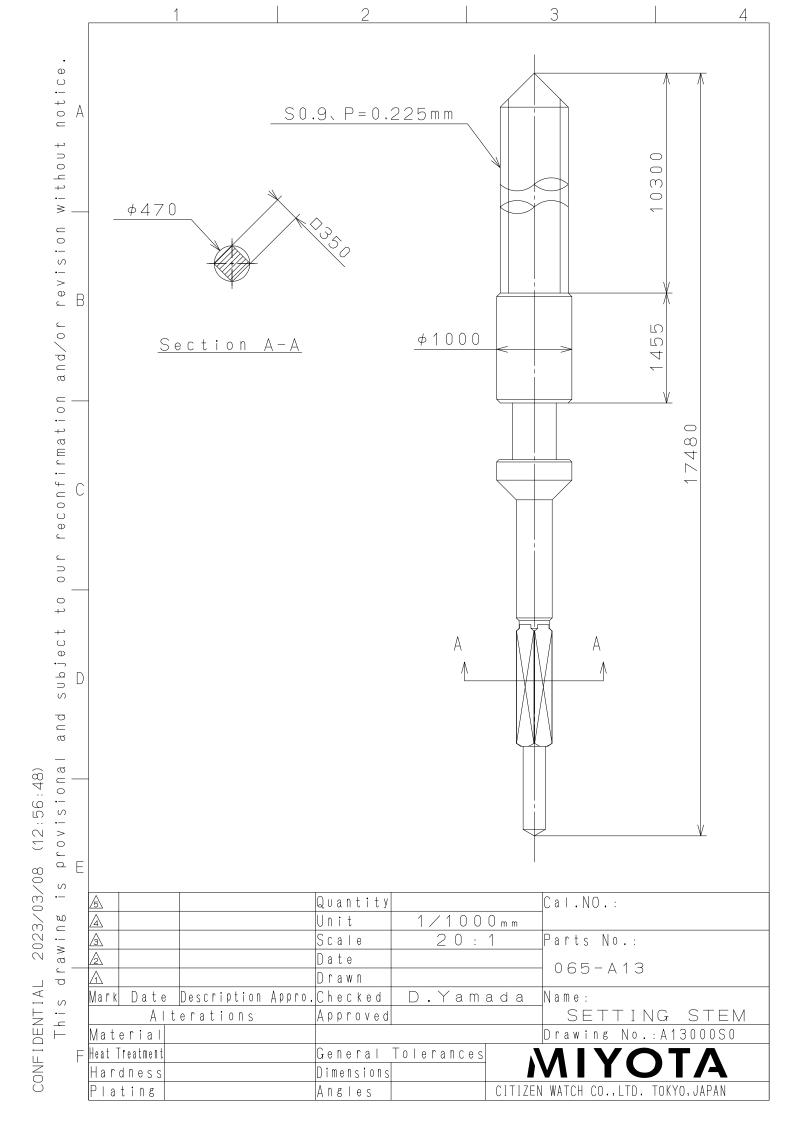




Cal. 6S10/6S20/6S30 Instruction manual

CHRONOGRAPH FUNCTION:CENTER CHRONOGRAPH SECOND HAND 1/4 sec. Timing up to 59 minutes 59 seconds at 1/20 sec.

- A) DISPLAYS AND BUTTONS
- **B) SETTING THE TIME**
- C) SETTING THE DATE
- D) USING THE CHRONOGRAPH
- E) CHRONOGRAPH RESET (INC. AFTER REPLACING BATTERY)

A) DISPLAYS AND BUTTONS

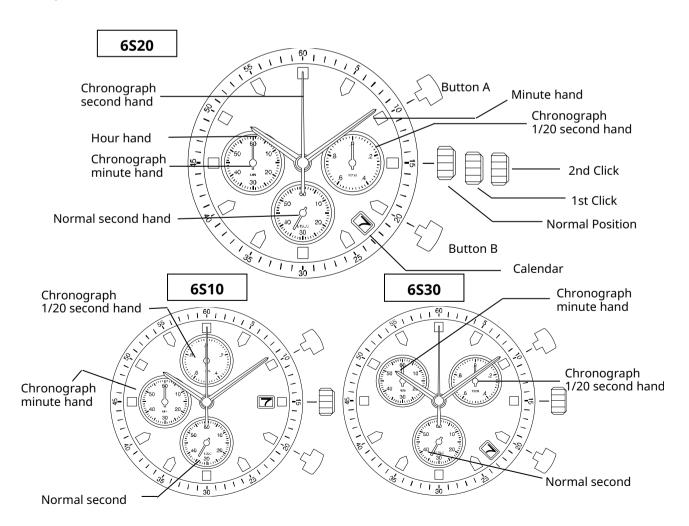

B) SETTING THE TIME

- 1. Pull the crown out to the 2nd Click Position.
- 2. Turn the crown clockwise to set hour and minute hands.
- 3. After the time has been set, push the crown back to the Normal position.

C) SETTING THE DATE

- 1. Pull the crown out to the 1st Click Position.
- 2. Turn the crown clockwise to set the date.
 - * If the date is set between the hours of around 9:00 PM and 1:00 AM, the date may not change on the following day.
- 3. After the date has been set, push the crown back to the Normal position.


D) USING THE CHRONOGRAPH

This chronograph is able to measure and display time in 1/20 second united up to maximum of 59sec.

The chronograph 1/20 second hand keeps continuously for 30 seconds after starting, and then stops at Zero position.

[Measuring time with the stopwatch]

- 1. Press button " A " to start the chronograph.
- 2. The chronograph can be started and stopped each time button "A" is pressed.
- 3. Press button "B" to reset the chronograph and chronograph minute and second hands return to their Zero positions.



E) CHRONOGRAPH RESET (INCL. AFTER REPLACING BATTERY)

This procedure shoud be performed when the chronograph second hand does not return to the Zero position.

- 1. Pull the crown out to the 2nd Click Position.
- 2. Press the button "A" once to set the chronograph second hand to the Zero position.
- 3. Press the button "B" once to set the chronograph 1/20 second hand to the Zero position.
 - *The chronograph hands can be advanced rapidly by continuously pressing button "A" or "B".
- 4. Once the hands are set at Zero position, reset the time and return the crown to its normal position.

These specifications might be changed without prior notice.